 
 




TRANSPARENT OBJECT SENSOR

Setup and programming the PRT-080-Q8

Locking and Unlocking the keypad

To unlock the keypad press  and  and hold for 4 seconds. The padlock symbol will turn off.

To lock the keypad press  and  and hold for 4 seconds. The padlock symbol will turn on.


Sensitivity adjustment

To increase the sensitivity press  N times

 

To decrease the sensitivity press  N times

Each time a button is pressed the value will increase or decrease.

Self-Teach operation

For standard mode press  1 time

Light On / Dark On function

1. Press and hold the  button for 4 seconds. The output operation will be reversed. The operation of the indicator  does not change.

 
Alignment



Press and hold the  button for 4 seconds, the Δ indicator will blink.


The Δ indicator will flash at three different frequencies proportional to the signal.


To exit press and hold the  button for 4 seconds.

Timing functions

1. Press and hold the  button, the Δ indicator will blink.

2. For ON delay press the  button to increase the time delay or press the  button to decrease the time delay.

3. For OFF delay set the time value in step 2 and then press and hold the  button for 4 seconds.

4. To reset the timer value press the  button.

5. To exit press and hold  for 4 seconds. Note: The "t" LED will be On if the timer function is on.

Timing Chart

